

RESISTANCE DECADE BOX


Model : RBOX-408

ISO-9001, CE, IEC1010

FEATURES

* Applications :

General applications
Troubleshooting, maintenance
Education and Vocational training
Production line testing
Radio and TV services
Working standards
Research design & develop
Physics laboratory work

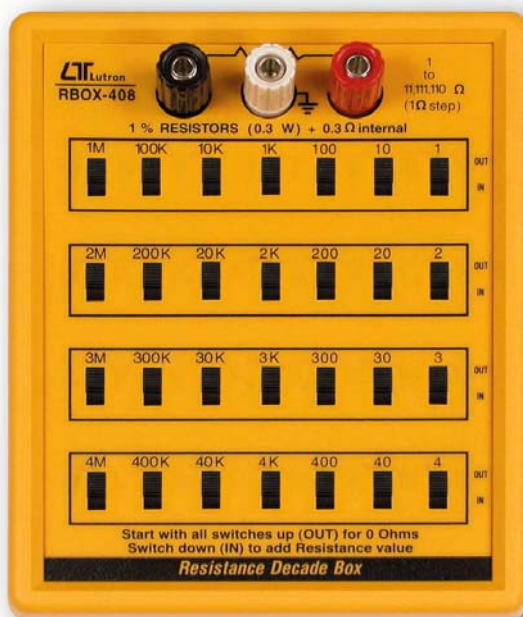

- * Pocket size, offering accurate, reliable performance.
- * 1 to 11,111,110 ohm, wide range and high resolution (1 ohm per step), practical and versatile tools.
- * With seven decades of resistance.
- * Slide switches that allow the user to simply add or subtract for desired value.
- * Terminals with multi way binding posts, one to switch shield case.



Lutron

LUTRON ELECTRONIC

The Art of Measurement

RESISTANCE DECADE BOX

Model : RBOX-408

FEATURES	
* Applications :	<p><i>General applications</i></p> <p><i>Troubleshooting, maintenance</i></p> <p><i>Education and Vocational training</i></p> <p><i>Production line testing</i></p> <p><i>Radio and TV services</i></p> <p><i>Working standards</i></p> <p><i>Research design & develop</i></p> <p><i>Physics laboratory work</i></p>
* Pocket size, offering accurate, reliable performance.	
* 1 to 11,111,110 ohm, wide range and high resolution (1 ohm per step), practical and versatile tools.	
* With seven decades of resistance.	
* Slide switches that allow the user to simply add or subtract for desired value.	
* Terminals with multi way binding posts, one to switch shield case.	
* ABS plastic housing case, rugged components.	

SPECIFICATIONS	
Range	1 to 11,111, 110 ohm (1 ohm per step)
Accuracy	1% resistors used throughout.
Wattage	1 W. * Do not add the voltage over AC/DC 250 V to the output resistance terminals even its stand Wattage is less than 1 W.
Internal Stray Resistance	0.3 ohm max.
Power Supply	None
Operating Temperature	0 to 50 °C (32 to 122 °F).
Operating Humidity	Less than 80% RH.
Weight	320 g/0.70 lb.
Dimension	14.7 cm x 11.7 cm x 5.5 cm. (5.79 x 4.61 x 2.16 inch).
Accessory Included	Operation Manual..... 1 PC.
Optional Accessory	Test alligator clips, one pair, TL-05

OPERATION PROCEDURE	
1) Start with all switches up (OUT) for 0 ohms.	
2) Switch down (IN) to add Resistance value.	

* Appearance and specifications listed in this brochure are subject to change without notice.

1001-RBOX408